

Htc-2 Indoor and outdoor thermometer user manual

Functions and characteristics:

- a. Display inside/outdoor temperature, indoor humidity.
- b. Records maximum/minimum temperature and humidity.
- c. Two temperature options of centigrade and Fahrenheit.
- d. Hoarfrost alarm while outdoor degree is among -1°C to $+4^{\circ}\text{C}$.
- e. Indoor temperature range: $-10\sim 50^{\circ}\text{C}$ ($+14\sim +122\text{F}$)

Outdoor temperature range: $-50\sim +70^{\circ}\text{C}$ ($-58\sim +158\text{F}$)

Temperature display precision: 0.1°C

Temperature error: $\pm 1^{\circ}\text{C}$

- f. Humidity range: $20\sim 99\%RH$.

Humidity display precision: $1\%RH$.

Humidity error: $\pm 5\%RH$

- g. Working voltage 1.5V, supper low power consumption.

Operation Instruction:

- a. Press <C/F>key to switch degree display of centigrade and Fahrenheit.
- b. Press <IN/OUT> key to switch degree display of indoor and outdoor.
- c. Press<MAX/MIN> to display record maximum or minimum value of humidity,indoor degree and outdoor degree .Press<CLEAR>key to clear records while in maximum or minimum value mode.
- d. Snow icon will occur or disappear after hold <FZ.ALERT> about 2 seconds.Hoarfrost alarm function: AFTER start this function.It will

alarm while outdoor degree is among -1°C to $+4^{\circ}\text{C}$.

e. When Humidity $< 40\%RH$, display “ DRY” mark.

When Humidity $< 70\%$, display” WET” mark.

When $40\%RH < \text{Humidity} < 70\%RH$, display” comfort” mark.